


CONCRETE REPAIR IN POTABLE WATER STRUCTURES

Patch repair work

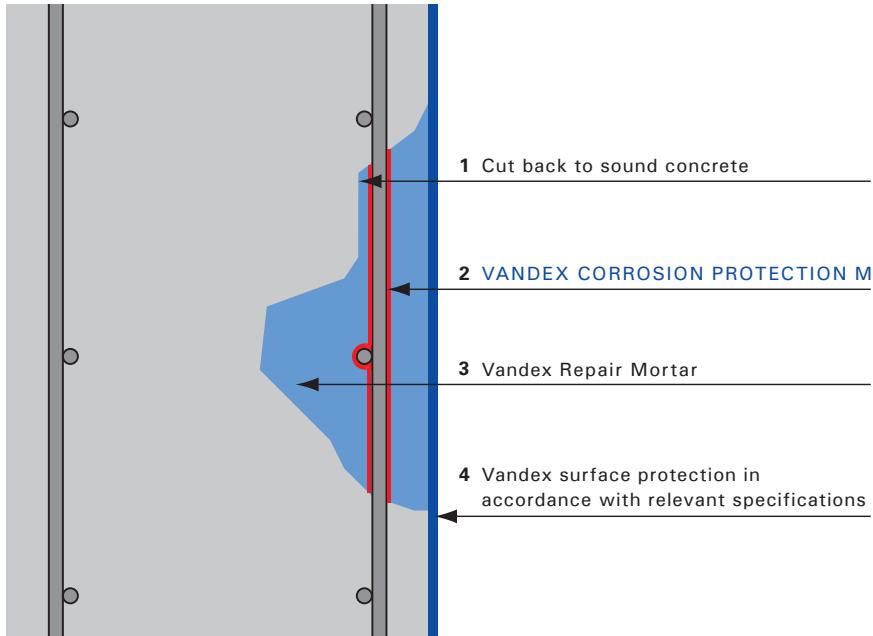

Application Instructions

Patch repair work:

- 1** Cut back all protrusions back to sound concrete, remove all damaged concrete sections.
- 2** Brush apply VANDEX CORROSION PROTECTION M in two coats onto the cleaned reinforcement bars.
- 3** Reprofile cavities area with suitable Vandex repair mortar in layers, the numbers depending on the total cavity depth.
- 4** Apply Vandex surface protection in accordance with the relevant specifications.

Remark:

- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.